



GOOD PRACTICE

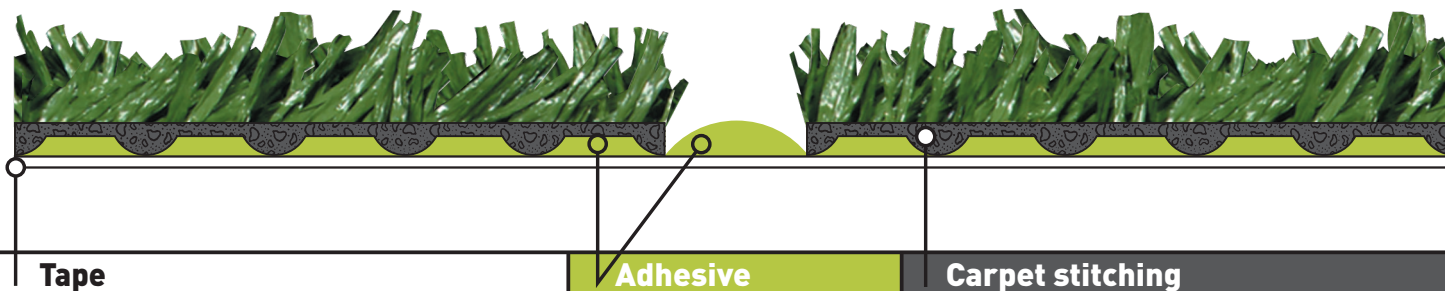

Above picture displays the correct application of adhesive to the tape in beads to sufficiently fill the voids between the carpet stitching after the carpet is consolidated onto the tape.

BAD PRACTICE

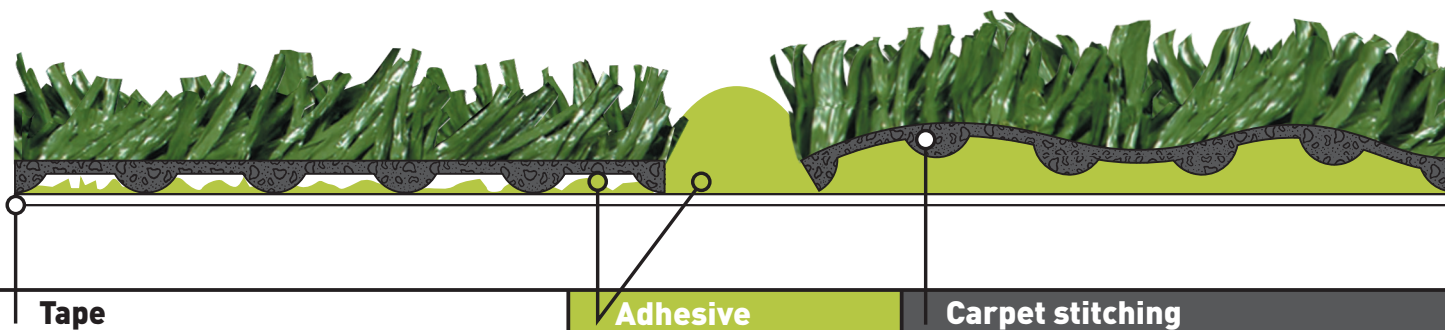

Insufficient adhesive application results in glue starvation between the carpet stitching resulting in areas not bonded, this will seriously compromise the integrity of this join.

Excessive adhesive application results in overfilling the voids between the carpet stitching, causing it to ride on the adhesive and lift unevenly. Over application of adhesive can also result in excessive foaming in periods of high moisture during the curing process which could seriously compromise the integrity and aesthetics of the join.